

# FABRITEC™ Wall Panels

## Installation Instructions

FABRITEC Wall Panels have a lightweight willtec® foam core and are simple to install with a wide range of methods. The panels attach in seconds to existing, clean surfaces. Choose from the mounting options listed.


For ceiling installation instructions, contact illbruck acoustic, inc.



acouSTIC™ adhesive (part number PA-02) is a nontoxic, water-based adhesive that cleans up with soap and water. Each 10.5-ounce tube installs approximately 32 square feet of product. Tubes fit standard caulking guns or can be used with illbruck's applicator gun.



**acouSTIC adhesive installation:**  
Clean wall surface. Apply ¼" bead of adhesive around panel perimeter approximately 1"-1½" from panel edge. Apply a ¼" bead from corner to corner through the center to create an "X." Press panel to surface for 5 seconds. Pull the panel away for approximately 1 minute to allow adhesive to become tacky. Firmly press panel back into position.

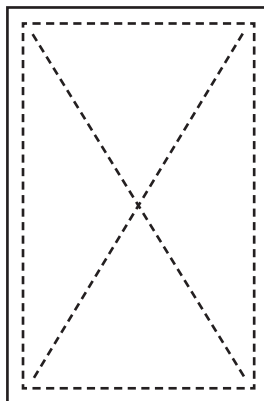

**Hook and loop fastener installation:**  
Prior to shipping, the loop side of the fastener is attached to the panel. The hook side is connected to the loop and has a tape backing. To install, just remove the tape backing and position the panel against the wall. FABRITEC Panels are lighter in weight because they are made with a willtec foam core. This makes installation with illbruck's acouSTIC adhesive sufficient for most installations of panels 24" x 48" or smaller in size. For any panel size larger than 24" x 48", we generally recommend using both hook and loop fastener and acouSTIC adhesive.



**Concealed spline installation:**  
Panels come with kerfs along the panel edges and are equipped with a concealed spline attachment. The spline is inserted into one of the panels and installed on the wall. Connecting panels are inserted into the other half of the spline.